

ROEQ

developed to move your business

Docking Stations

There are different docking solutions available, depending on which product is suitable for your specific facility, all of which can be had in a floor mounted or a wall/machine mounted version. The "Firmly Held" locking mechanism is suitable for Cart solutions, while the "Easy Pull Out" version can be used with both Cart and Rack solutions.

The "Firmly Held" locking mechanism



The "Firmly Held" locking mechanism is released automatically by the Top Module when the MiR100™/MiR200™ collects the cart, or it can be released manually.

Fits all Cart solutions




"Firmly Held" is available in a floor mounted model, able to stand securely in free space.



"Firmly Held" is also available for mounting on walls or machinery.

The "Easy Pull Out" locking mechanism

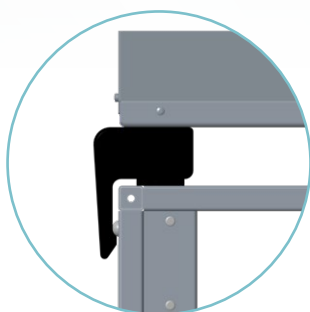


"Easy Pull Out" ensures great flexibility in the workplace; if required an operator can easily remove the cart from the docking station and place it there again after use. The robot opens the lock automatically when it collects the Cart or Rack again.

Fits all Cart and Rack solutions



"Easy Pull Out" is available as a floor mounted model, able to stand securely in free space.

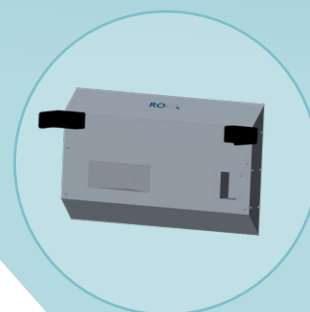

"Easy Pull Out" is also available for mounting on walls or machinery.

Visit our website for more information

www.roeq.dk